

Demagnetizer EMD 3

The demagnetizer removes residual magnetism at audio- and video heads and other small hardware.

Handling:

Keep the EMD 3 at the part that you will demagnetize, switch on, delete it slowly and switch off in a distance for at least 30 cm.

